

FORMATTER AND DC CONTROLLER INSTALLATION INSTRUCTIONS

HP LJ 4240, 4250, 4350

The first time the printer is powered up after installing a formatter or DC controller board, you must follow the procedure given below – otherwise, you risk downgrading the printer. For example, your 4350 could become a 4250, or your 4250N could become a 4250 without network capability.



1. Disconnect the printer from the computer and/or network. There should be nothing connected to the printer except the power cord.
2. Turn the power on, wait for the memory count to begin, and then press and hold ▼.
3. After all three control-panel lights flash once and then remain on (this should take about 10 seconds), release ▼.
4. Press and release ▲.
5. Press and release the “Menu” button. The display should show “SKIP DISK LOAD”.
6. Press ▲ until “NVRAM Init” is highlighted.
7. Press ✓. The printer will perform the NVRAM initialization procedure and then continue with its normal power-on sequence.
8. Once the printer reaches the “Ready” state, allow it to sit for at least five minutes with no activity. Then cycle the power, wait for the printer to get to “Ready” again, and allow another 5-minute waiting period. At the end of the second 5-minute waiting period, you can power off and re-connect the computer and/or network. You are now ready for normal operation.